

Step 1

Disconnect Spray Gun with Fitting from the Hose End Connector.



Step 2

Screw the Click-on Adapter to the supplied Accessory Connector.



Step 3

Now plug in your Click-on Adapter to your preferred watering accessory. Point and twist to connect to the Hose End Connector.



Unfortunately the Hoselink no-burst guarantee does not apply to the Click-on Adapter. Turn over the page for a no-burst connection option.

Step 1

Many watering accessories will allow you to unscrew the click-on style fitting as shown. However, if the fitting is glued or molded, then you will need to follow Option 1 overleaf.



Step 2

Once removed, the accessory will present with a female thread into which you can screw the supplied Accessory Connector.



Step 3

Attach the Accessory Connector to the Hose End Connector for a better no-burst connection.



Happily, this ensures a no-burst connection!