



Kit contents

- 1x 4-pattern wand
- 1x Hoselink accessory connector

The 4-Pattern Extendable Wand is great for both watering and cleaning. With the extendable handle, pivot head and in-built flow controller, it is perfect for hard to access areas.

Instructions

Step 1

Screw the Hoselink Accessory Connector into the base of the wand.

Step 2

Attach a Hoselink fitted garden hose at the end of the accessory connector on wand.

Step 3

Select the desired watering setting. Turn flow control to ON position by turning as per arrow directions and turn water on.



TIP

Make sure your selected setting is in line with the arrow on the head.

When changing settings, you will hear two 'clicks' before the next setting.




Extending and Unscrewing

Select the black nut located above the second foam grip. Unscrew the nut, pull the wand's head up to your desired length and then screw the nut back in place to secure.




Settings

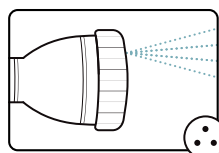


Mist

Wide mist spray, great for seedling.

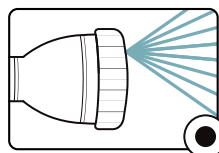


Cone

Wide, fine spray dispersion.

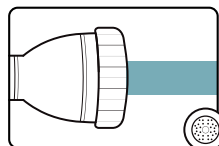

Gutter

Hard, direct spray. Perfect for gutter cleaning.

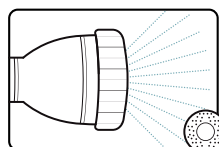

Shower

More direct spraying. Ideal for lawn, garden beds and pots.