

Kit contents

1x 9-Pattern Sprinkler
1x Hoselink Accessory Connector

Instructions

Step 1:

Connect to a water supply by attaching your Hoselink-fitted hose end to the Accessory Connector on the sprinkler.

Step 2:

Choose the desired spray setting by turning the black pattern selector dial until it clicks into place, in front of the brass water inlet.

Step 3:

Turn the water on.

Settings

There are 9 spray settings to choose from depending on the watering application.

Some settings may perform better than others according to the supplied water pressure. For each setting, water is emitted from the actual function selected, except for the Soaker and Round Outer Rim functions as outlined below.

1. **Soaker:** This is the only function which utilises the centre fan. Water is emitted from the holes under the fan blades. Please note the centre fan requires good to strong water pressure in order to spin
2. **Rounded Square:** Sprays in a squarish shape with rounded off corners.
3. **Square:** Sprays in a square shape.
4. **Round Outer Rim:** Sprays gentle jets from the holes around the outside of the pattern selector dial.
5. **Arc:** Sprays in a rectangular arc in front of the sprinkler.
6. **Narrow Rectangle:** Sprays in a narrow band to either side of the sprinkler.
7. **Classic Round:** Sprays in a regular circular shape.
8. **Half Moon:** Sprays in a half circle in front of the sprinkler.
9. **Wide Rectangle:** Sprays in a wide band to either side of the sprinkler.

Troubleshooting

This is a strong and durable product that should give you many years of service. Should you experience a blockage, unscrew the Hoselink Accessory Connector and flush out with water.

The mesh filter will stop large particles in the water from entering the sprinkler. This can also be removed for cleaning if necessary.

