

User Manual

Model: L240 | Long-lasting Solar
Wall Light with Sensor 34LED



The Long-lasting Solar Wall Light comes with three lighting modes, built in battery indicator and a motion sensor. Ideal for a security light or illuminating driveways, paths and patios.



Lighting Modes

1. Red Indicator - Continuously emits a dim light from dusk to dawn, with a bright light for 15-20 seconds when motion is detected.
2. Orange Indicator - Light automatically comes on at dusk and off at dawn. First 3 hours at full brightness then dim light will remain on continuously until motion is detected then a bright light will show.
3. Green Indicator - 100% brightness from dusk until dawn.

Product Installation - OPTION 1

Adhere using Hoselink Outdoor Acrylic Double Sided Tape (SKU L100).

Product Installation - OPTION 2

Follow these steps to mount to the wall or fence using the supplied plugs and screws:

Step 1 - Find a suitable location

Solar lights need access to direct sunlight for optimum results, preferably 6-8 hours per day. The motion sensor will detect movement up to 6m away.

Step 2 - Mounting the solar light

Use a 6mm drill piece for masonry installation. Gently hammer the plugs into place and then secure the screws tightly.

For timber use a 3mm drill piece without the plugs.

Step 3 - Turn on the light

To activate the light, press and hold the red button. Once the light comes on you can press the red button to choose your light settings. When selecting the light settings press the red button once, do not hold.

Test by covering the solar panel completely to check that the light comes on.

Note: If the light does not turn on this could be due to the battery not being charged. Leave out in direct sunlight for 6 – 8 hours and try again.

For more information visit
www.hoselink.com.au
or call 1300 900 617