

# User Manual

Model: L250 | **Wide Angle Solar Wall Light with Sensor 18LED**



The Wide Angle Solar Wall Light with Sensor comes with two additional LED bulbs angled on either side of the light to create a wider range of luminosity. The maximum lighting angle can reach 120 degrees, ideal for illuminating driveways and entertaining areas.



## Lighting Mode

The light automatically turns on with a dim light at dusk. Once motion is detected, a bright light is activated for 20 seconds.

## Product Installation - OPTION 1

Adhere using Hoselink Outdoor Acrylic Double Sided Tape (SKU L100).

## Product Installation - OPTION 2

Follow these steps to mount to the wall or fence using the supplied plugs and screws:

### *Step 1 - Find a suitable location*

Solar lights need access to direct sunlight for optimum results,

preferably 6-8 hours per day. The motion sensor will detect movement up to 5m away.

### *Step 2 - Mounting the solar light*

Use a 6mm drill piece for masonry installation. Gently hammer the plugs into place and then secure the screws tightly. For timber use a 3mm drill piece without the plugs.

### *Step 3 - Turn on the light*

To activate the light, turn on the switch on the back of the unit. Test by covering the solar panel completely to check that the light comes on. The light is now ready for use.

**Note:** If the light does not turn on this could be due to the battery not being charged. Leave out in direct sunlight for 6 – 8 hours and try again.

For more information visit  
[www.hoselink.com.au](http://www.hoselink.com.au)  
or call 1300 900 617