

User Manual

Model: L270 | **Wall-mount Solar Floodlight with Sensor 80LED**



A motion-sensor solar light with a choice of 3 light times to satisfy differing demands, this wide-angle light is the ideal choice for illuminating fences, patios, decking or walkways.



Lighting Modes

Dim light with sensor mode (flashes once) - continuously emits a dim light (24LEDs) from dusk until dawn, with a bright light for 15-20seconds when motion is detected.

Bright Sensor Mode (Flashes 2 times) - Light remains on standby mode until motion is detected and bright light is emitted for 15-20 seconds.

Medium Light Mode (Flashes 3 times) - Light automatically comes on at dusk and off at dawn. Overnight light duration depends on amount of light exposure to the solar panel during the day.

Product Installation - OPTION 1

Adhere using Hoselink Outdoor Acrylic Double Sided Tape (SKU L100).

Product Installation - OPTION 2

Follow these steps to mount to the wall or fence using the supplied plugs and screws:

Step 1 - Find a suitable location

Solar lights need access to direct sunlight, preferably 6-8 hours per day. The motion sensor will detect movement up to 5m away.

Step 2 - Mounting the solar light

Use a 6mm drill piece for masonry installation. Gently hammer the plugs into place and then secure the screws tightly. For timber drill a 3mm pilot hole to guide the screws

into place (Plastic plugs are not required).

Step 3 - Turn on the light

To activate the light, turn on the switch on the side of the unit. Turn this on to desired setting. Test by covering the solar panel completely to check that the light comes on. The light is now ready for use.

Note: If the light does not turn on this could be due to the battery not being charged. Leave out in direct sunlight for 6 – 8 hours and try again.

For more information visit
www.hoselink.com.au
or call **1300 900 617**